


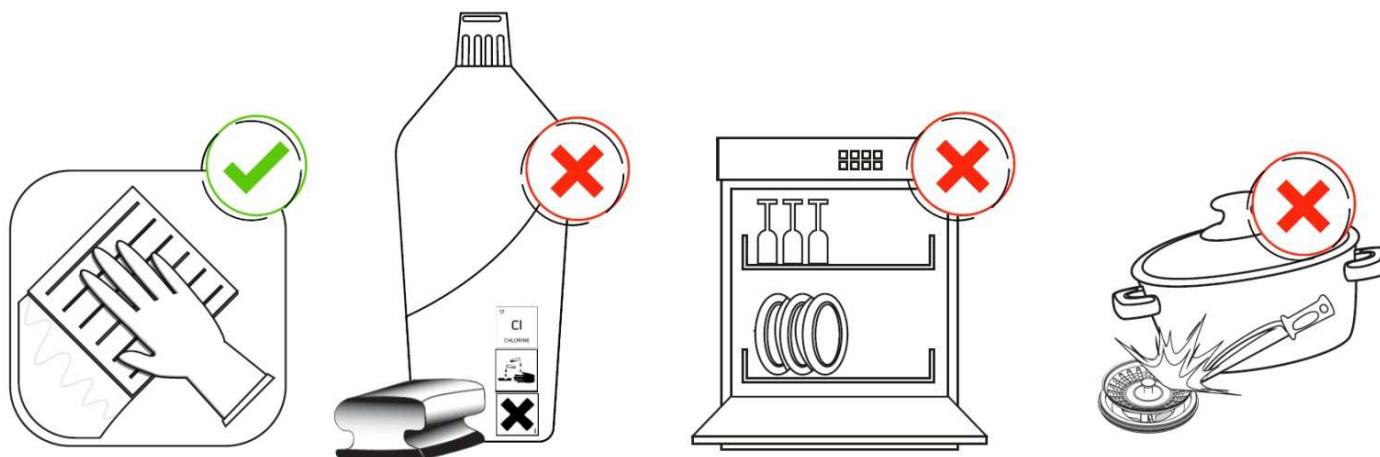

DK

- Rengør kun med vand og almindelige sulfo. Tør grundigt af med en ren, blød klud efter hver brug.
- Brug ikke eddike, slibende eller aggressive rengøringsmidler. Brug ikke skuresvampe, ståluld eller metalrensemidler.
- Brug ikke kemiske produkter til husholdnings- og industribrug.
- Må ikke installeres på vaske, der kan blive udsat for dårligt vejr.
- Undgå at ramme produktet med skarpe eller tunge genstande, såsom knive, pander, gryder eller tallerkener.
- Må ikke vaskes i opvaskemaskine.
- Løft afdækning af overløbet forsigtig – fx mha. en lille skuredrækker – for at rengøre overløbet.
- I tilfælde af reklamationer på produktet, send et billede af defekten og CQ-koden vist på emballagen.

EN

- Clean with water and non-abrasive soap only. Wipe thoroughly using a clean soft cloth after every use.
- Do not use vinegar, abrasive or acid detergents. Do not use scouring pads, steel scrubbers or metal cleaning products.
- Do not use any chemical product for domestic and industrial use.
- Do not install on sinks that may be exposed to bad weather.
- Avoid hitting the product with sharp or heavy objects, such as knives, pans, cooking pots or plates.
- Do not wash in dishwasher.
- Carefully lift the cover of the overflow using, for example, a small screwdriver, to clean the overflow.
- In case of non-conformity of the product, provide a photo of the defect and the CQ code shown on the packaging.